

M73

SETTING UP WIRELESS NETWORK

1. Power on the device and wait for it to load the main menu.

2. Press the Setup button on the remote control or use the arrow keys (CH+ , CH-) and select "Services" (fig.1) and press OK/ENTER on the remote , then select "Setup" (fig.2) and press OK/ENTER .

Fig.1

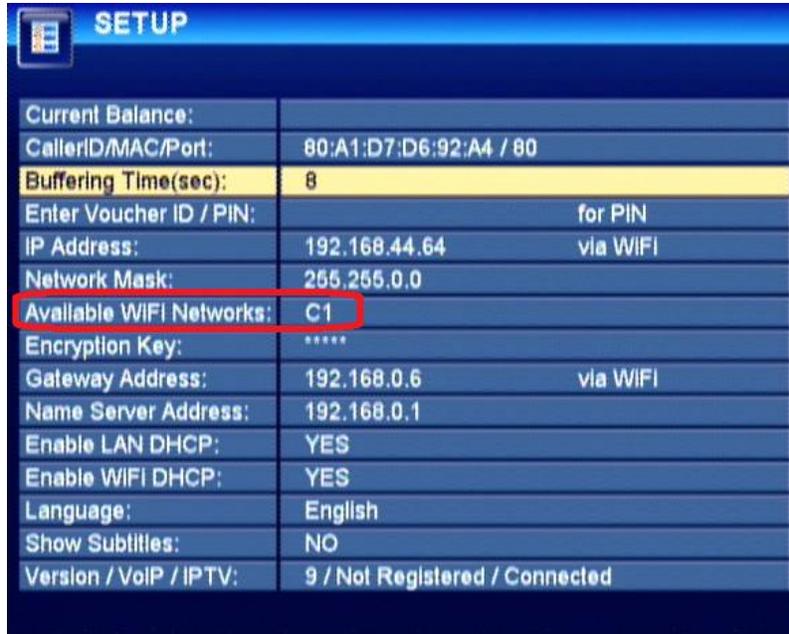


Fig.2



3. Once you are in the Setup menu, use the arrow keys (CH+, CH-) to navigate to “Available WiFi Networks”, then use the Left and Right arrow keys to select your home network.


Fig.3



SETUP	
Current Balance:	
CallerID/MAC/Port:	80:A1:D7:D6:92:A4 / 80
Buffering Time(sec):	8
Enter Voucher ID / PIN:	for PIN
IP Address:	192.168.44.64 via WIFI
Network Mask:	255.255.0.0
Available WiFi Networks:	C1
Encryption Key:	*****
Gateway Address:	192.168.0.6 via WIFI
Name Server Address:	192.168.0.1
Enable LAN DHCP:	YES
Enable WIFI DHCP:	YES
Language:	English
Show Subtitles:	NO
Version / VoIP / IPTV:	9 / Not Registered / Connected

4. After you have selected your WiFi network, press the Down arrow key (CH-) to select “Encryption Key” and type in your WiFi password by using the remote control.


Fig.4

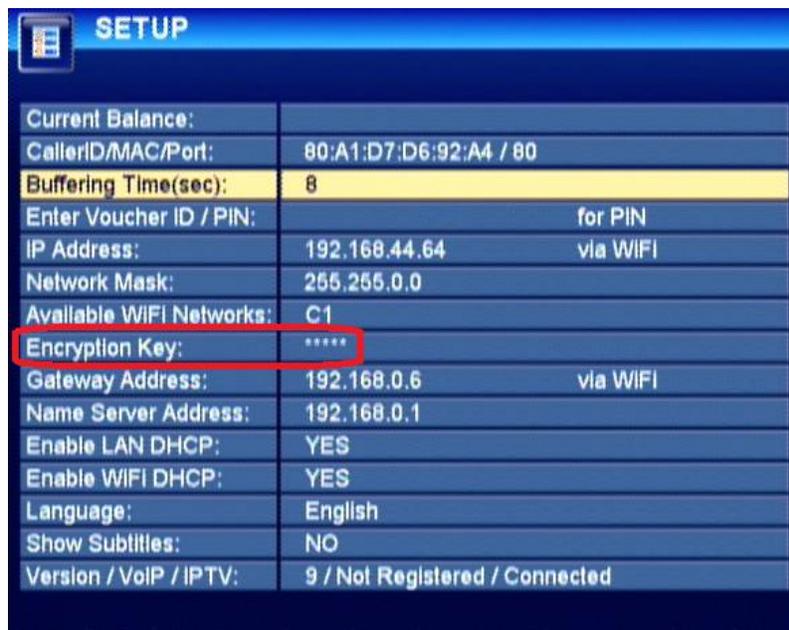

SETUP	
Current Balance:	
CallerID/MAC/Port:	80:A1:D7:D6:92:A4 / 80
Buffering Time(sec):	8
Enter Voucher ID / PIN:	for PIN
IP Address:	192.168.44.64 via WIFI
Network Mask:	255.255.0.0
Available WiFi Networks:	C1
Encryption Key:	*****
Gateway Address:	192.168.0.6 via WIFI
Name Server Address:	192.168.0.1
Enable LAN DHCP:	YES
Enable WIFI DHCP:	YES
Language:	English
Show Subtitles:	NO
Version / VoIP / IPTV:	9 / Not Registered / Connected

5. Press the Down arrow key once again to select "Gateway Address" and by using the Left and Right arrow keys be sure to select "Via Wifi"

Fig.5

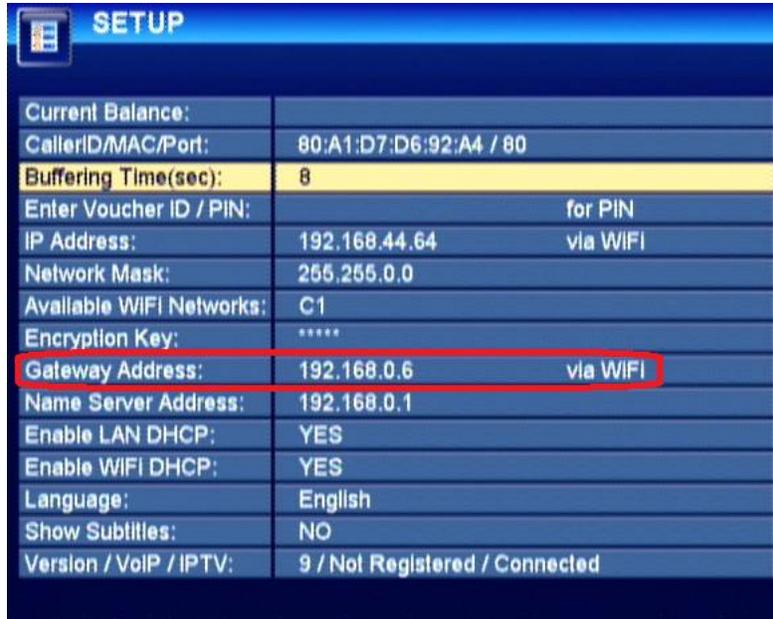

SETUP	
Current Balance:	
CallerID/MAC/Port:	80:A1:D7:D6:92:A4 / 80
Buffering Time(sec):	8
Enter Voucher ID / PIN:	for PIN
IP Address:	192.168.44.64 via WIFI
Network Mask:	255.255.0.0
Available WIFI Networks:	C1
Encryption Key:	*****
Gateway Address:	192.168.0.6 via WIFI
Name Server Address:	192.168.0.1
Enable LAN DHCP:	YES
Enable WIFI DHCP:	YES
Language:	English
Show Subtitles:	NO
Version / VoIP / IPTV:	9 / Not Registered / Connected

6. Press the Home button on the remote control or use the Return/Exit button to return to main menu.

7. Your device is set to your home wireless network.

M73

SETTING UP WIRELESS NETWORK

1. Power on the device and wait for it to load the main menu.

2. Press the Setup button on the remote control or use the arrow keys (CH+ , CH-) and select "Services" (fig.1) and press OK/ENTER on the remote , then select "Setup" (fig.2) and press OK/ENTER .

Fig.1



Fig.2



3. Once you are in the Setup menu, use the arrow keys (CH+, CH-) to navigate to "WiFi Networking" (fig.3), then use the Right arrow key to select "Wireless Device Status". Be sure to set it to "Enable" (fig.4).

Fig.3



Fig.4



4. Press the Down arrow key (CH-) to select "SSID Name" (fig.5). Then use the Left and Right arrow keys to select your home network (fig.6).

Fig.5



Fig.6



5. Press the Down arrow key once again to select “Encryption Key” and type in your WiFi network name by using the remote control (fig.7). You can bring up a virtual keyboard (fig.8) by pressing the “Info” button on the remote control. When you are done typing press the “return” key on the virtual keyboard.

Fig.7



Fig.8



6.Press the Home button on the remote control or use the Return/Exit button to return to main menu.

7.Your device is set to your home wireless network.